

## Instruction manual

# Remote controls **my move** WC und Washstand

Press and hold the button until the desired height is reached (upwards movement)

Water flush

Press and hold the button until the desired height is reached (downward movement)



Remote control WC

Press and hold the button until the desired height is reached (upwards movement)

Press and hold the button until the desired height is reached (downward movement)



Remote control Washstand



Back: Battery replacement