



SANTRO Element Assembly instruction


Mount wall rail

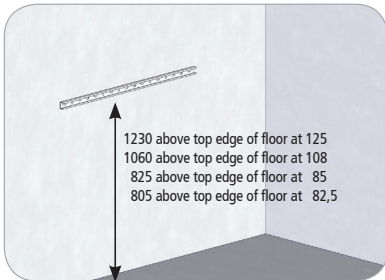


Lock the bolt on the U-profile

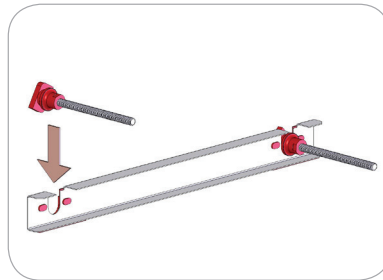


Place on wall rail

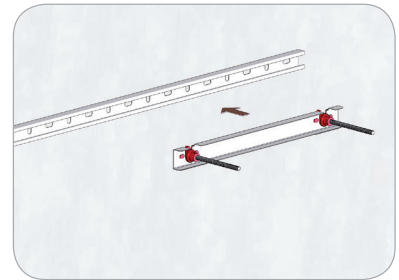


Tighten with open-end spanner

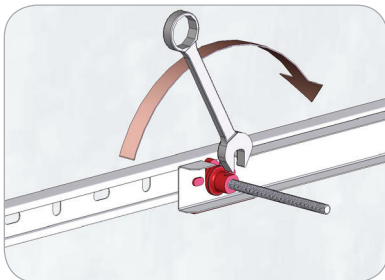


Insert foot plates, adjust

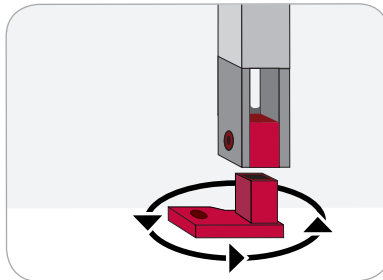


Foot plates outside

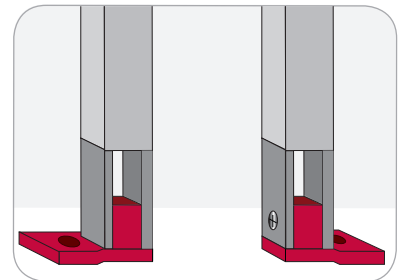


Front foot plates

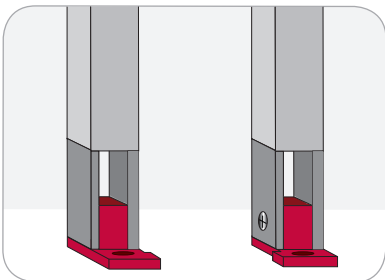


or foot plates inside

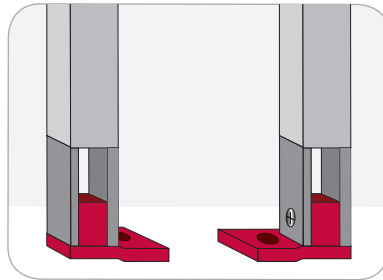


and screw tight

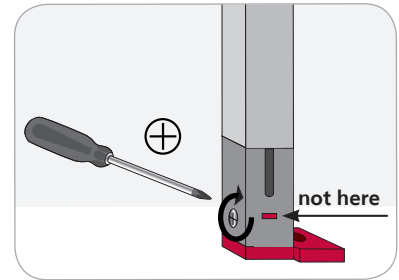


Loosen screw on outer profile

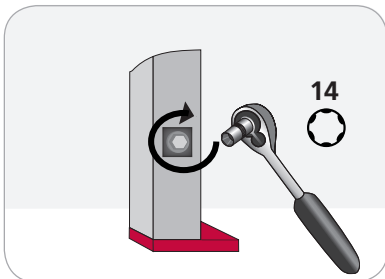



Adjusting the height

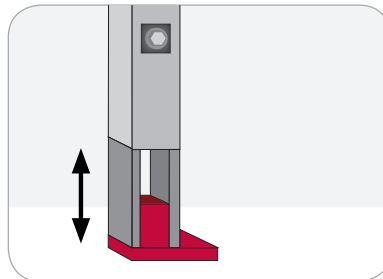


Slide the module onto the bolt

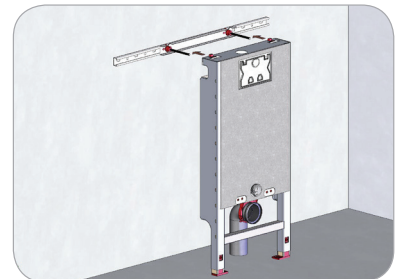

and align in depth

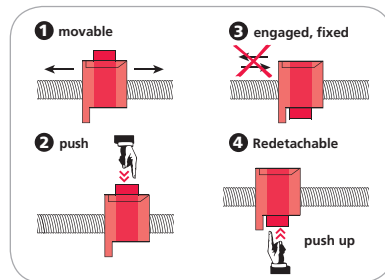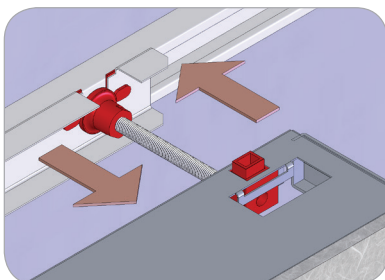

Engage and anchor foot area

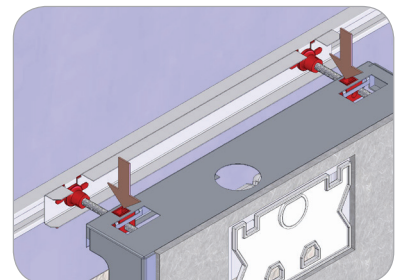

After mounting the WC bolts, lock them with the enclosed 12 mm nut.